


STATISTIC REPORT TURBO COMP.



13.02.19 13:23:56 - 13.02.19 13:25:41

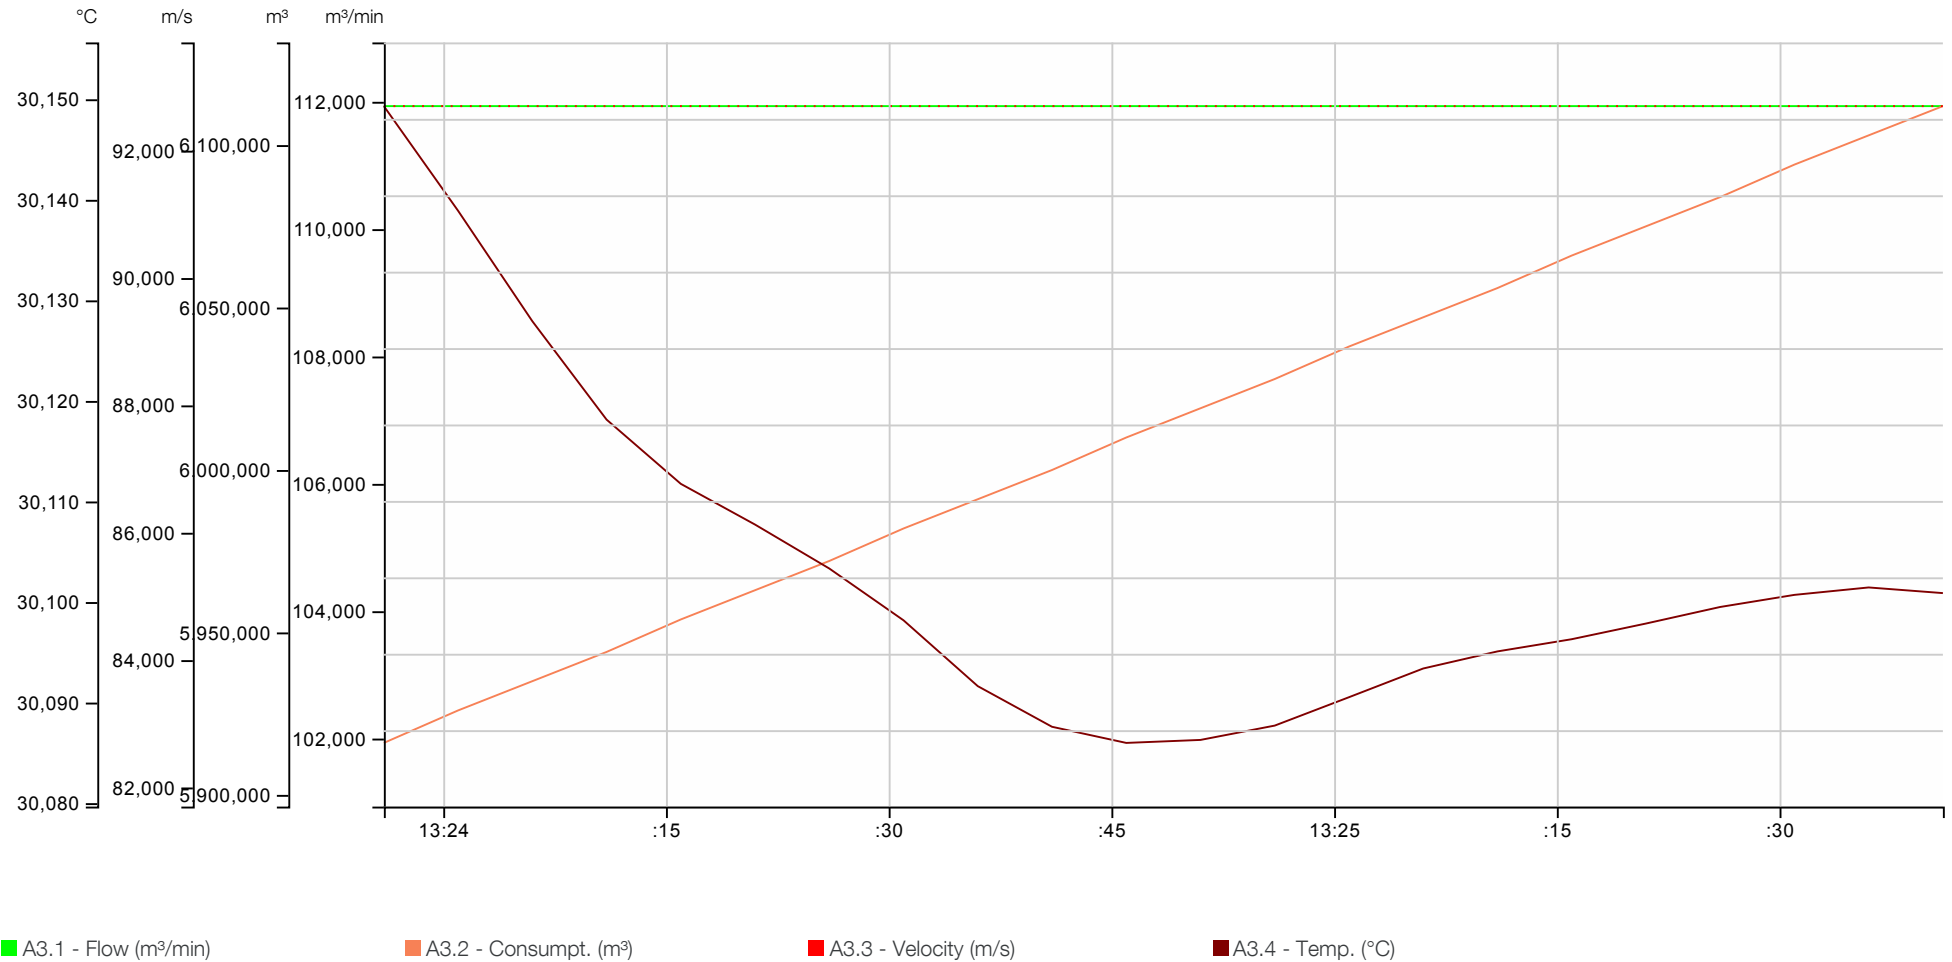

DP510 - Print date: 02.03.19 15:14:46

Comment: TURBO COMP./FLOW METERING/TEST REPORT/BAREZ INDUSTRIAL GROUP

Channel	Average	Minimum	Date of minimum	Maximum	Date of maximum
A3.1 - Flow (m ³ /min)	111.9321 m ³ /min	111.9321 m ³ /min	13.02.19 13:23:56	111.9321 m ³ /min	13.02.19 13:23:56
A3.2 - Consumpt. (m ³)	6014.3182 m ³	5916 m ³	13.02.19 13:23:56	6112 m ³	13.02.19 13:25:41
A3.3 - Velocity (m/s)	92.7 m/s	92.7 m/s	13.02.19 13:23:56	92.7 m/s	13.02.19 13:23:56
A3.4 - Temp. (°C)	30.1032 °C	30.086 °C	13.02.19 13:24:46	30.1493 °C	13.02.19 13:23:56

DP510 - Print date: 02.03.19 15:14:46

Comment: TURBO COMP./FLOW METERING/TEST REPORT/BAREZ INDUSTRIAL GROUP

Time	50174441 (DP510) A3-1 Flow [m ³ /min]	50174441 (DP510) A3-2 Consumpt. [m ³]	50174441 (DP510) A3-3 Velocity [m/s]	50174441 (DP510) A3-4 Temp. [°C]
02/13/2019 13:24:00	111.9320	5924.0000	92.7000	30.1410
02/13/2019 13:24:05	111.9320	5933.2000	92.7000	30.1301
02/13/2019 13:24:10	111.9320	5942.2000	92.7000	30.1201
02/13/2019 13:24:15	111.9320	5952.0000	92.7000	30.1131
02/13/2019 13:24:20	111.9320	5961.2000	92.7000	30.1085
02/13/2019 13:24:25	111.9320	5970.2000	92.7000	30.1042
02/13/2019 13:24:30	111.9320	5980.0000	92.7000	30.0992
02/13/2019 13:24:35	111.9320	5989.2000	92.7000	30.0929
02/13/2019 13:24:40	111.9320	5998.2000	92.7000	30.0884
02/13/2019 13:24:45	111.9320	6008.0000	92.7000	30.0863
02/13/2019 13:24:50	111.9320	6017.2000	92.7000	30.0862
02/13/2019 13:24:55	111.9320	6026.2000	92.7000	30.0874
02/13/2019 13:25:00	111.9320	6036.0000	92.7000	30.0899
02/13/2019 13:25:05	111.9320	6045.2000	92.7000	30.0928
02/13/2019 13:25:10	111.9320	6054.2000	92.7000	30.0948
02/13/2019 13:25:15	111.9320	6064.0000	92.7000	30.0961
02/13/2019 13:25:20	111.9320	6073.2000	92.7000	30.0976
02/13/2019 13:25:25	111.9320	6082.2000	92.7000	30.0992
02/13/2019 13:25:30	111.9320	6092.0000	92.7000	30.1005
02/13/2019 13:25:35	111.9320	6101.2000	92.7000	30.1013
02/13/2019 13:25:40	111.9320	6110.2000	92.7000	30.1010
02/13/2019 13:25:45	111.9320	6120.0000	92.7000	30.0990